

Chair Assembly Instructions

Tools you will need:

#2 phillips screwdriver
1/2" wrench

STEP 1: Unpack the contents of the box

You should have the following pieces:

- 1 - Seat Bottom Assembly
- 1 - Seat Back Assembly
- 2 - Arm Assemblies
- 2 - Oak Flat Head Plugs

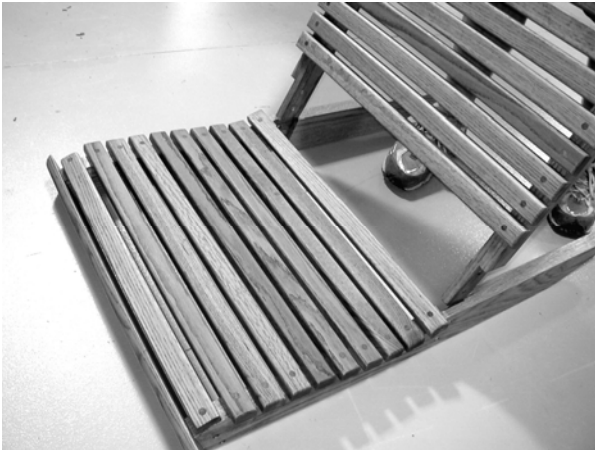


figure 2a

STEP 2: Assemble the back and seat. Align the seat and back (as shown in figure 2a, and 2b), fitting the lap joints together. Insert one carriage bolt in each end to temporarily hold the seat and back together. Tighten the nuts finger tight. Insert the remaining carriage bolts through the lap joint and tighten the nuts finger tight.



Close-up of seat and back lap joint fitment
figure 2b



figure 3a

STEP 3: Attach the arms. Position the chair on its back as shown in figure 3a. Position either the left or right arm assembly and align the carriage bolts with the mating holes in the frame. It may be necessary to move the back slightly to align the rear screw with its hole. Using a #2 phillips screwdriver, tighten this screw fully. (see figure 3b) After tightening the rear screw, tighten the carriage bolts fully.



figure 3b

STEP 4: Tighten the remaining carriage bolts. Using a 1/2" wrench, tighten the nuts on the carriage bolts at the seat and back joint to secure the seat and back together.

We at RMH Woodworks thank you very much for your purchase of a handcrafted solid oak adirondack chair. With proper care and maintenance it should provide many years of service. Enjoy!

RMH Woodworks
1912 North Beechwood Dr. □ □
Florence, Al. 35630
256-767-2146

